

INSTALLATION INSTRUCTIONS AND PARTS LIST

APPLICATION:

230710 HORIZONTAL SST GRILLE INSERT:
2007 AND NEWER CHEVROLET SILVERADO 1500



NO DRILL INSTALLATION


1. Read instructions completely and check to make sure that all the required parts (listed on service parts list) are on hand before starting the installation.
2. Remove the eight (8) plastic plugs holding down the radiator shroud. This will allow access to the rear of the vehicle grille through the top.
3. Install each of the Sst Grille Inserts (items #1, and #2) as follows:
 - 3.1 Place the carriage bolts. (item #3) into each hole.
 - 3.2 Inset retainer plates (item #4,6) between front of the grille and the back of the grille insert.
(NOTE: Slightly forming the insert to the contour of the vehicle grille will aid with installing the carriage bolts.)
 - 3.3 From the rear of the vehicle grille install retainer plates (item #4) and the 10-24 KEPS lock nuts (item #5) as shown in fig. 1 and finger tighten only.
 - 3.4 Repeat steps 3.1 through 3.3 for both inserts.
 - 3.5 Center the Sst Grille Inserts and tighten all fasteners. Use caution not to over tighten as you could crack the vehicle grille.
4. Reinstall the eight (8) plastic plugs holding down the radiator shroud.

SERVICE PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
1	107651	1	SST GRILLE INSERT, LOWER, 230710
2	107650	1	SST GRILLE INSERT, UPPER, 230710
3	105398	9	BOLT-CARRIAGE, 10-24 X 2", SST
4	235014	13	PLATE-RETAINER, SST, 0.125X0.5X2.0 (1) HOLE
5	105370	9	NUT- KEPS, 10-24, SST
6	235015	2	PLATE-RETAINER,SST,0.125 X .50 X 3.00 (2) HOLE

SERVICE PARTS LIST

MODEL NO. - 230710

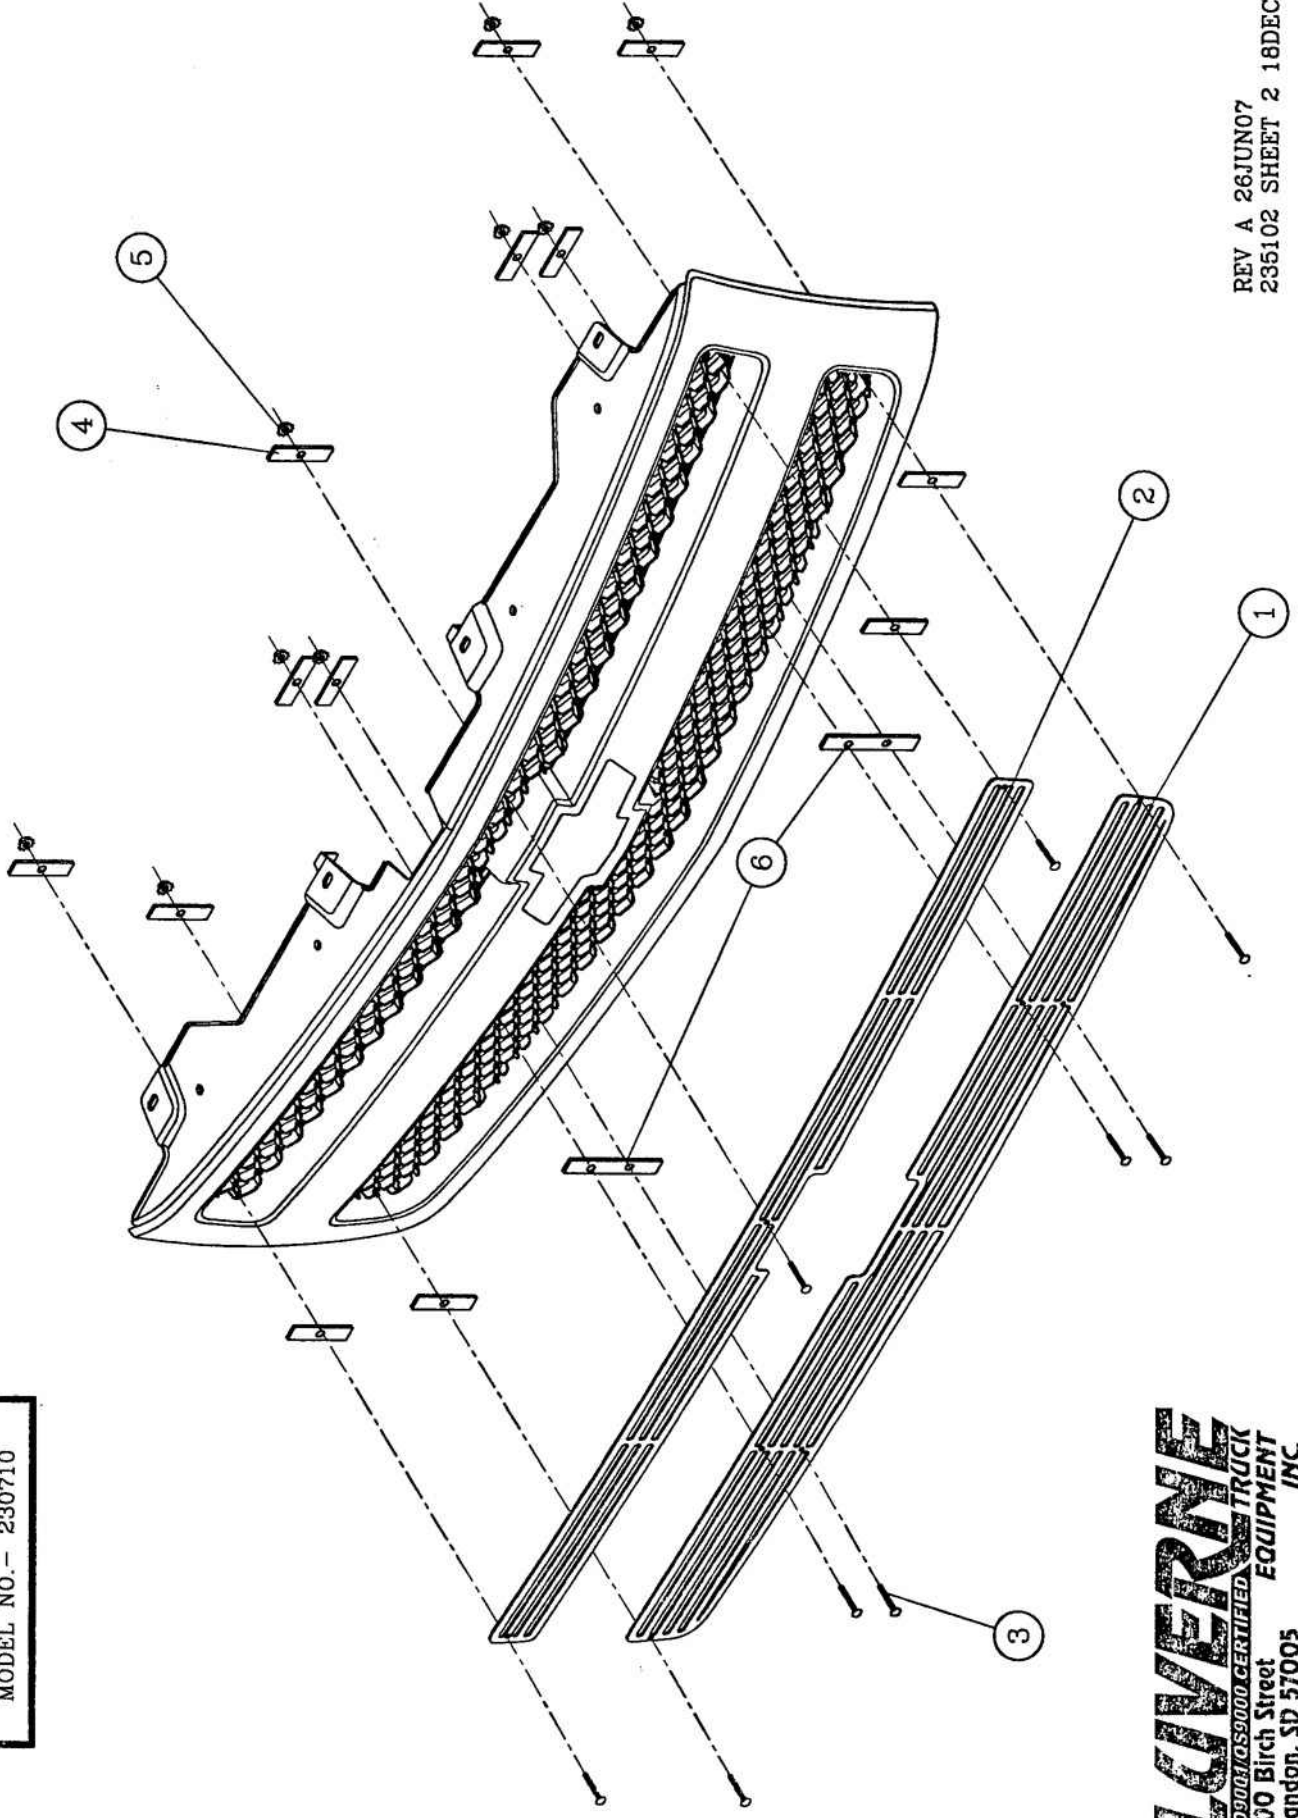

REV A 26JUN07
235102 SHEET 2 18DEC06

LOVERNE
ISO 9001:2008 CERTIFIED TRUCK
EQUIPMENT
INC.
1700 Birch Street
Brandon, SD 57005