

INSTALLATION INSTRUCTIONS AND PARTS LIST

APPL: 45/460673 STEEL (BLACK) & STAINLESS STEEL NERF BARS ON:
2006 AND NEWER HONDA RIDGELINE CREW CAB


1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. NERF BAR TUBE AND MOUNTING BRACKET ASSEMBLIES ARE PRE-ASSEMBLED.
3. REMOVE THE EIGHT (8) APPLICABLE PLUGS THAT PROTECT THE 8MM THREADS. THIS IS DONE BY GENTLY PUSHING IN THE CENTER PIN, THUS RELEASING THE PRESSURE.
4. POSITION THE NERF BAR ASSEMBLY UP UNDER THE 8MM THREADS: (NOTE: LUVERNE DECAL IS ON THE FRONT DRIVER SIDE).
 - 4.1. PLACE A STAINLESS STEEL 3/8-16 BOLT AND JAM NUT UNDERNEATH THE TOP SIDE OF FRONT BRACKET. THIS IS USED AS A TENSION ADJUSTMENT SCREW.
 - 4.2. USING (2) 8MM BOLTS, FLAT WASHER, AND LOCK WASHER (ITEMS 9, 10, 11), HAND TIGHTEN FRONT BRACKET TO THE BOTTOM OF THE TRUCK.
 - 4.3. REPEAT OPERATION 4.2 FOR THE REAR BRACKET. IF THE BRACKETS NEED ADJUSTMENT, NOW IS THE TIME TO ADJUST. TIGHTEN 8 MM BOLTS.
5. TIGHTEN TENSION BOLT. MAKE SURE THAT THE BRACKET IS ON TOP OF THE PINCHWELD LIP.
6. IF NEEDED WE PROVIDE AN OPTIONAL 1/4 -20 BOLT AND NUT TO ATTACH THE FRONT BRACKET TO THE PINCH WELD. THIS WILL REQUIRE A HOLE TO BE DRILLED THROUGH THE PINCH WELD USING THE HOLE IN THE FRONT BRACKET AS A PILOT HOLE.

SERVICE PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|------|----------|-----|--|
| 1 | 551087 | 1 | NERF BAR WLDMT- LH,SST,460673 |
| 2 | 551088 | 1 | NERF BAR WLDMT- RH,SST,460673 |
| 1 | 551098 | 1 | NERF BAR WLDMT- LH,BLACK,450673 |
| 2 | 551099 | 1 | NERF BAR WLDMT- RH,BLACK,450673 |
| 3 | 104249 | 4 | BOLT-HEX HD CAP, SERR FLNG, 1/2 -13 X 2.00, ZP |
| 4 | 551089 | 1 | BRKT-MTG,NB,LH,REAR,45/460673 |
| 5 | 551090 | 1 | BRKT-MTG,NB,RH,REAR,45/460673 |
| 6 | 551093 | 1 | BRKT-WLDMT,MTG,NB,LH,FRONT,45/460673 |
| 7 | 551094 | 1 | BRKT-WLDMT,MTG,NB,RH,FRONT,45/460673 |
| 8 | 103950 | 4 | PAD-STEP, NB, BLK, 20.00 LG |
| 9 | 102549 | 8 | SCREW-HEX, M8-1.25 X 25MM, ZINC PLATED |
| 10 | 100030 | 8 | WASHER-LOCK, 5/16, ZINC PLATED |
| 11 | 100034 | 8 | WASHER-FLAT, 5/16, ZINC PLATED |
| 12 | 101351 | 2 | SCREW-HEX 1/4-20X1.25, SST |
| 13 | 102366 | 2 | NUT-FLANGE,HEX, 1/4-20, SST |
| 14 | 101376 | 2 | SCREW-HEX 3/8-16X1.25, SST |
| 15 | 101315 | 2 | NUT-HEX, 3/8-16, SST |

SERVICE PARTS LIST

MODEL NO. - 450673 (BLACK)
- 460673 (SST)

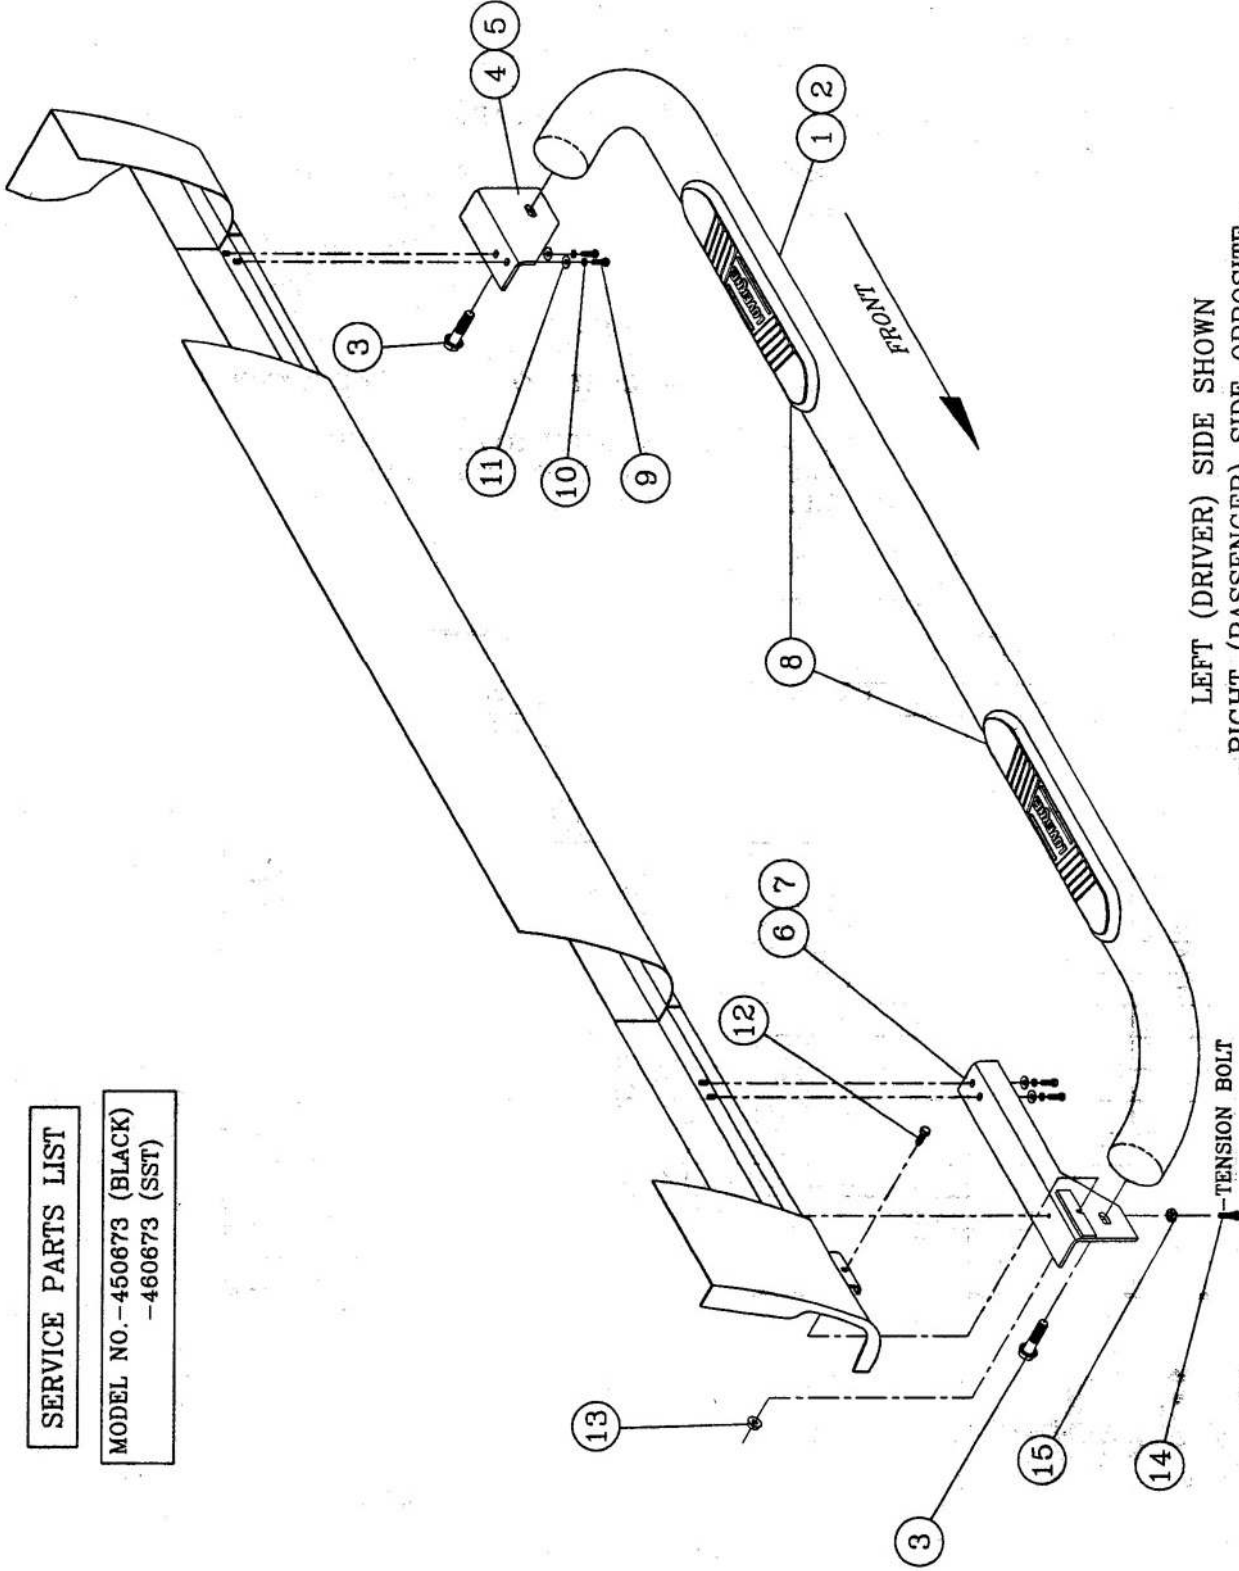

LEFT (DRIVER) SIDE SHOWN
- RIGHT (PASSENGER) SIDE OPPOSITE -

LAVERNE TRUCK EQUIPMENT INC.
1200 Birch Street
Brandon, SD 57005