

INSTALLATION INSTRUCTIONS AND PARTS LIST

APPL: 46/450711 SERIES POLISHED STAINLESS STEEL & BLACK NERF BARS ON:
2007 AND NEWER CHEVROLET/GMC REGULAR CAB PICKUPS



NO DRILL APPLICATION

1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. NERF BAR TUBE AND MOUNTING BRACKET ARE PRE-ASSEMBLED.
NOTE: THE 1" X 3" SERIAL NUMBER DECAL IS LOCATED ON THE FRONT LEG OF THE LEFT (DRIVERS SIDE) NERF BAR ASSEMBLY.
3. REMOVE THE FOUR (4) APPLICABLE FACTORY BODY MOUNT BOLTS FROM THE VEHICLE.
 - 3.1 THESE FOUR (4) BOLTS ARE REUSED IN THIS INSTALLATION.
 - 3.2 THE BODY MOUNT STEEL WASHER PLATES WITH RUBBER CUSHIONS ARE REUSED BETWEEN THE BODY MOUNT AND THE NERF BAR MOUNTING BRACKET.
4. POSITION THE NERF BAR ASSEMBLY UP UNDER THE VEHICLE AND ATTACH THE FRONT AND REAR BRACKETS TO THE BODY MOUNTS WITH FACTORY BODY MOUNT BOLTS AS SHOWN.
5. TORQUE ALL BODY MOUNT BOLTS TO 65 LB. FT.

SERVICE PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
1	548654	2	NERF BAR -GM,REG,LH/RH,BLK,C9911TB
1	548651	2	NERF BAR- GM,REG,LH/RH,SST, C9911SST
2	550130	2	BRKT-MTG,NB,GM,REG/EXT FRONT
3	548646	2	BRKT-MTG,NB,GM, LH/RH,REAR


LIVERNE
ISO9001/ISO9000 CERTIFIED TRUCK
EQUIPMENT
INC.
1200 Birch Street
Brandon, SD 57005

548642 SHEET 1 24JAN07

SERVICE PARTS LIST

MODEL NO.450711-460711

2007 SILVERADO/SIERRA REG CAB

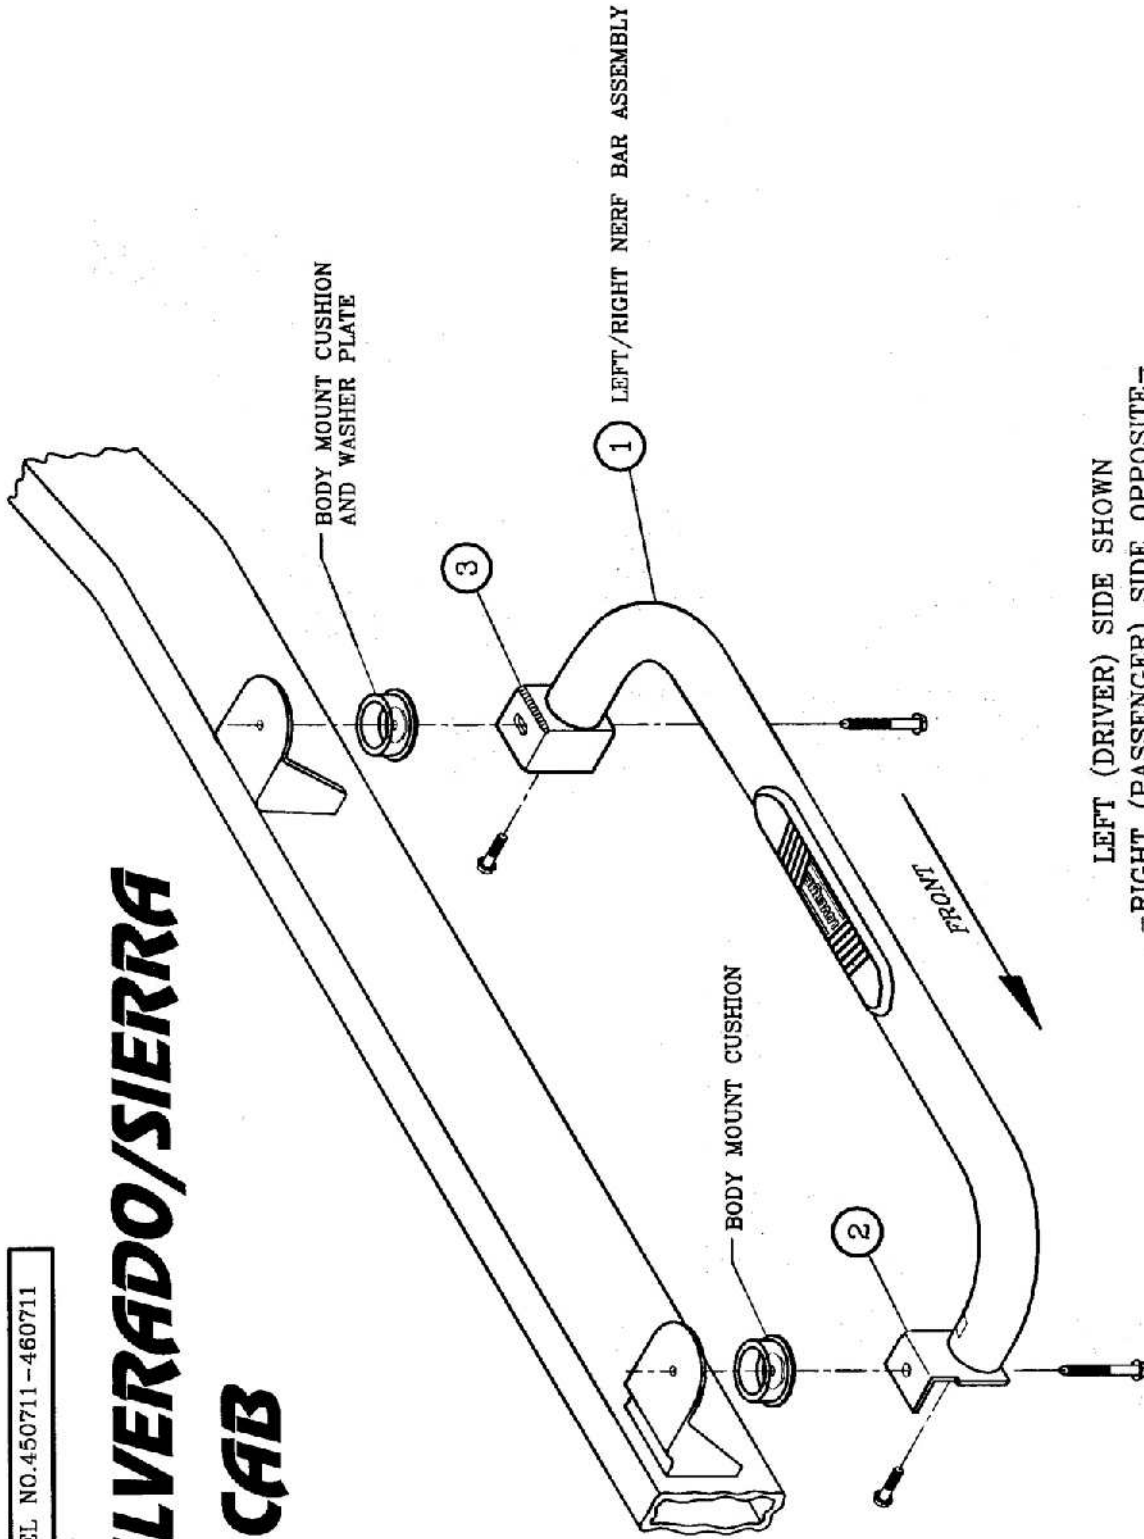

LEFT (DRIVER) SIDE SHOWN
-RIGHT (PASSENGER) SIDE OPPOSITE-